



**Autonomous Vehicle Simulation (AVS) Laboratory,
University of Colorado**

Basilisk Technical Memorandum

COARSESENSOR

Rev	Change Description	By	Date
1.0	Initial Document	H. Schaub	20170720
1.1	Full Draft with test description	S. Carnahan	20170803
1.2	Edit to reflect algorithm changes	S. Carnahan	20170918
1.3	Edit to new configuration log output message	H. Schaub	2020-09-17

Contents

1	Model Description	2
1.1	Overview	2
1.2	Single CSS module	2
1.2.1	I/O Messages	2
1.2.2	CSS Signal Simulation	2
1.3	Constellation or Array of CSS Modules	4
2	Model Functions	4
3	Model Assumptions and Limitations	4
4	Test Description and Success Criteria	5
5	Test Parameters	6
6	Test Results	7
7	User Guide	9
7.1	Setting the CSS Unit Direction Vector	9
7.1.1	Direct Method	9
7.1.2	Via a Common Sensor Platform	9
7.2	CSS Field-of-View	10
7.3	CSS Output Scale	10
7.4	Specifying CSS Sensor Noise	10
7.5	Connecting Messages	11
7.6	Auxiliary Parameters	11
7.7	Setting Up CSS Modules	11
7.7.1	Individual CSS Units	11
7.7.2	Array or Constellation of CSS Units	11

1 Model Description

1.1 Overview

This document describes how Coarse Sun Sensor (CSS) devices are modeled in the Basilisk software. Each CSS is modeled through a nominal cosine response relative to the sunlight incidence angle and proportional to light intensity. It is possible to add individual CSS sensors to the BSK evaluation stack. However, it is typically simpler to use the `CSSConstellation()` class to store a list of CSS units which are updated as a group, along with a unique CSS array output message.

1.2 Single CSS module

1.2.1 I/O Messages

First, let us discuss the input and output messages of the individual CSS sensor module. The two required input messages are of the type `SpicePlanetStateMsgPayload` and `SCStatesMsgPayload`. The first message is used to determine the sun's location relative to the inertial frame ${}^{\mathcal{N}}\mathbf{r}_{\odot/\mathcal{N}}$. The second message is used to read in the spacecraft inertial position vector relative to the same inertial frame ${}^{\mathcal{N}}\mathbf{r}_{\mathcal{B}/\mathcal{N}}$. Finally, the last message is optional. If it is connected, it provides the sun shadow parameter indicating if the spacecraft is in a planet's shadow.

One output message of an individual CSS unit creates a message containing the simulated CSS sensor. The second output message is of type `CSSConfigLogMsgPayload` that logs the CSS configuration states.

Note, if using a CSS constellation class of CSS devices then the CSS message connections must be made before copying them into the CSS device vector in the constellation class.

1.2.2 CSS Signal Simulation

To evaluate the sun heading vector \mathbf{s} , the satellite and sun position vectors are used.

$${}^{\mathcal{N}}\mathbf{s} = {}^{\mathcal{N}}\mathbf{r}_{\text{Sun}/\mathcal{N}} - {}^{\mathcal{N}}\mathbf{r}_{\mathcal{B}/\mathcal{N}} \quad (1)$$

After normalizing this vector to $\hat{\mathbf{s}}$ and mapping ${}^{\mathcal{B}}\sigma_{\mathcal{B}/\mathcal{N}}$ to $[BN]$, it is mapped into body frame components through

$${}^{\mathcal{B}}\hat{\mathbf{s}} = [BN]{}^{\mathcal{N}}\hat{\mathbf{s}} \quad (2)$$

The CSS sensor unit normal vector is given by ${}^{\mathcal{B}}\hat{\mathbf{n}}$ in body frame components. The normalized cosine sensor signal $\hat{\gamma}$ is thus determined through

$$\hat{\gamma} = \hat{\mathbf{n}} \cdot \hat{\mathbf{s}} = \cos \phi \quad (3)$$

where ϕ is the CSS sunlight incidence angle. This is the normalized CSS signal where 1 is returned if the sensor is looking straight at the sun. If the sensor axis $\hat{\mathbf{n}}$ is more than the field of view half-angle (set through `fov`) from the sun axis, then a 0 signal is simulated. This `fov` variable is the angle from $\hat{\mathbf{n}}$ beyond which the CSS signal is set to zero.

The Kelly parameter allows for the CSS signal to pinch towards zero for larger incidence angles as illustrated in Figure 1. The amount of signal distortion is set through κ , where the Kelly factor p_{κ} is then computed as

$$f_{\kappa} = 1 - e^{-\hat{\gamma}^2/\kappa} \quad (4)$$

so that the normalized output curve with kelly application is:

$$\gamma_{\kappa} = \gamma f_{\kappa} \quad (5)$$

This reflects the true output behavior of a sun sensor at larger incidence angles. Next, this cosine curve

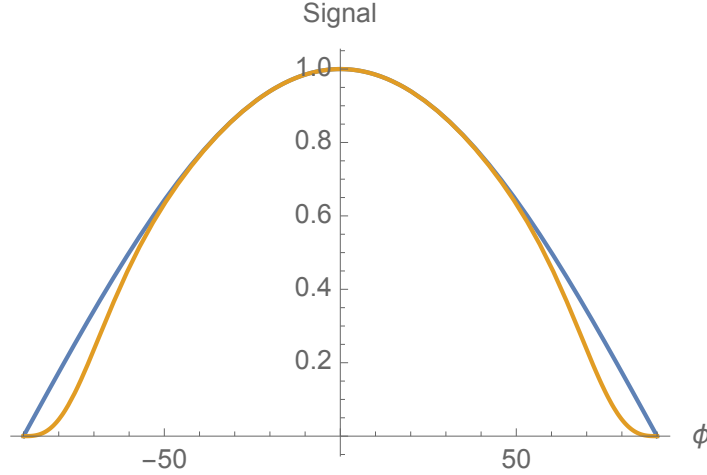


Fig. 1: Kelly distortion (orange,lower) illustration with $\kappa = 0.1$

is scaled according to the intensity of the light the sensor receives. This includes scaling based on solar flux at a given distance from the sun as well as eclipse shadowing. Note that the model is standardized for 1 AU from the sun so that the output will remain as seen in Fig. 1 for an un-eclipsed spacecraft at 1 AU from the sun. The solar intensity factor based on distance from the sun is:

$$f_{\text{sunDist}} = \frac{(1\text{AU})^2}{r_{\text{SC/Sun}}^2} \left[\frac{\text{m}^2}{\text{m}^2} \right] \quad (6)$$

and the shadow factor due to eclipse is given as f_s . So the output curve adjusted for light intensity is:

$$\gamma_{\text{li}} = \gamma_{\kappa} f_{\text{sunDist}} f_s \quad (7)$$

If the spacecraft is outside of a planet's shadow, f_s is 1. If it is within the shadow, then it is $0 \leq f_s < 1$. This curve has now accounted for light intensity, but not for the magnitude or units of the sensor electronics output. To do that, a scale factor, f_{scale} is factored into the equation:

$$\gamma_{\text{clean}} = f_{\text{scale}} \gamma_{\text{li}} \quad (8)$$

where γ_{clean} is the output of a sensor with no noise.

Next, Gaussian noise and sensor bias can be added to the signal. The normalized bias is set through `SenBias`, while the normalized noise is set through `SenNoiseStd`. Let n be the normalized sensor noise and b be the normalized sensor bias. Note that these values are non-dimensional and apply to the unscaled output. Therefore, they will also be scaled when a scale factor is applied to the output. The noisy and appropriately scaled output of the sensor is:

$$\gamma_{\text{noise}} = (\gamma_{\text{li}} + n + b) f_{\text{scale}} \quad (9)$$

This indicates that sensor noise is not a function of light incidence angle or light intensity. Now, the noise or bias could have caused the sensor to produce a value less than 0 or higher than is possible for the hardware. To prevent this, saturation values are input as and treated as max/min values:

$$\gamma_{\text{capped}} = \min(\text{maxOutput}, \gamma_{\text{noise}}) \quad (10)$$

$$\gamma_{\text{out}} = \gamma_{\text{floored}} = \max(\text{minOutput}, \gamma_{\text{capped}}) \quad (11)$$

This is the final output of the sensor module.

1.3 Constellation or Array of CSS Modules

The `CSSConstellation` class is defined as a convenience such that the Basilisk update function is called on a group of CSS modules. Here the CSS BSK modules are created and configured as before, but are then provided to the `CSSConstellation` class object as a list of CSS in python. The CSS can be configured individually, and must each be connected with the required input messages. However, the `CSSConstellation` will gather all the CSS outputs and write a single CSS Constellation output message of the type `CSSArraySensorMsgPayload`.

2 Model Functions

The coarse sun sensor functions have been mentioned in passing but are described below:

- **Cosine Curve:** Given the sensor vector to the sun, a cosine signal is generated and returned.
- **Field of View:** The module can limit it's outputs to be zero outside of a given half-conic angle field of view.
- **Kelly Curve:** The module can apply a Kelly Factor to the cosine curve to simulation realistic effects at high incidence angles.
- **Noise:** The module can apply Gaussian noise to the signal.
- **Bias:** The module can apply a bias to the signal.
- **Saturation:** The module can apply floor and ceiling to prevent sensor outputs from straying beyond reasonable values.
- **Single Sensor:** The module can set up a signal coarse sun sensor.
- **CSS Constellation:** The module can set up a constellation of coarse sun sensors.
- **Interface: Spacecraft State:** The module receives spacecraft state information from the messaging system.
- **Interface: Sun State:** The module receives sun ephemeris information through the messaging system
- **Interface: Eclipse:** The module receives optional eclipse information through the messaging system.
- **Interface: Outputs:** The single CSS modules create individual CSS sensor output messages, while the CSS Constellation creates a single output message with all the CSS sensor signals.

3 Model Assumptions and Limitations

Assumptions made in this coarse sun sensor module and the corresponding limitations are shown below.

1. **Conical Symmetry:** The module assumes that sensor readings and bias are the same in every direction from normal. In reality, there may be different biases or errors depending on which direction the sun vector is from the sensor normal vector. This limits the use of this module to sensors that are symmetric or only slightly asymmetric.
2. **Albedo:** Currently, the model is hard-coded to zero-out any albedo input, so it is limited to cases where albedo is not important.

3. **Cosine Behavior:** The model assumes the sensor to have a nominal cosine behavior. This is distorted by the Kelly factor. To improve behavior closer to reality where housing and spacecraft glint might cause slightly non-conical non-cosine behaviors, a look-up table of sensor outputs compared to sun headings could be implemented in future work.

4 Test Description and Success Criteria

The Coarse Sun Sensor Test, `test_coarseSunSensor.py`, contains 11 tests. The simulation is set up with only the coarse sun sensor(s) and made-up messages to simulation spacecraft, sun, and eclipse information. The spacecraft is in a convenient attitude relative to the sun and rotates all of the sensors in a full circle past the sun.

1. **Basic Functionality:** A single sensor is run with minimal modifications and compared to a cosine.
Success Criteria: The output curve should match a cosine curve.
2. **Eclipse:** A single sensor is run with an eclipse simulated and compared to an eclipse factored cosine.
Success Criteria: The output curve should match a cosine curve times the eclipse factor input
3. **Field of View:** A single sensor is run with a smaller field of view and compared to a clipped cosine.
Success Criteria: The output curve should match a cosine curve truncated to zero beyond the field of view input.
4. **Kelly Factor:** A single sensor is run with a Kelly factor input and compared to a modified cosine.
Success Criteria: The output curve should match a cosine curve modified by the kelly curve equation seen previously in this report
5. **Scale Factor:** A single sensor is run with a scale factor and compared to a scaled cosine.
Success Criteria: The output curve should match a cosine curve multiplied by the scaleFactor input.
6. **Bias:** A single sensor is run with a bias and compared to a modified cosine.
Success Criteria: The output curve should match a cosine curve shifted in magnitude by the bias input.
7. **Noise:** A single sensor is run with noise and the standard deviation of that noise is compared to the input standard deviation.
Success Criteria: Once a clean cosine curve is subtracted from the output, the standard deviation should match the standard deviation input.
8. **Albedo:** A single sensor is run with an albedo input and shown to be no different than the standard cosine truth value. This is done because there is some albedo functionality programmed into the module but it should be inactive at this time.
Success Criteria: The output curve should match a cosine curve because the albedo input should have no effect.

9. **Saturation:** Non-zero minimum saturation and less-than-maximum-output maximum saturation values are input.

SuccessCriteria: Output should match generated truth to high accuracy and saturation values should be clearly visible in plot.

10. **Sun Distance:** The simulation is run with the spacecraft $2[AU]$ from the sun. The expected result is compared to the output.

Success Criteria: Output should match the generated truth to high accuracy.

11. **Clean Combined:** All of the inputs above except for noise are run on a single simulation. The expected result is compared to the output.

Success Criteria: Output should match the generated truth to high accuracy.

12. **Combined:** All of the inputs above are run on a single simulation. The expected result without noise is subtracted from the result. Then, the standard deviation of the noise. is compared to the expected standard deviation.

Success Criteria: Once a cosine curve modified by eclipse, field of view, kelly factor, scale factor, bias, and albedo are subtracted from the output, the standard deviation should match the given standard deviation.

13. **Constellation:** Two constellations of sensors are set up using various set up methods and simulated with a clean signal. The two constellations are tested to be identical to one another. Constellation P1 is established by directly assigning normal vectors to four sensors. Constellation P2 is established by giving angles that specify the placement of the constellation platform relative to the spacecraft body frame. Then, for constellation 2, the unit direction vector for each sensor is set with an azimuth and an elevation via `coarseSunSensor.setUnitDirectionVectorWithPerturbation()`. Finally, the fourth sensor in constellation P2 is set up in a different way than the others. It is not assigned platform frame angles but it is given incorrect azimuth and elevation headings which are corrected with "perturbation" inputs. Through all of these tests, constellation set up is verified, including the default platform DCM (identity).

Success Criteria: The output curve from constellation P1 should match the output curve from constellation P2.

5 Test Parameters

Pytest runs the following cases (numbered as above) when it is called for this test:

Table 2: Parameters for each test. Note that relative tolerance is $\frac{truth-output}{truth}$

Test	useConstellation	visibilityFactor	fov	kelly	scaleFactor	bias	noiseStd	albedoValue	saturation	errTol	sunDistInput
1	False	1.00	1.5708	0.00	1.00	0.00	0.000	0.0	10.00 ,0.00	1.0e-10	1.0
2	False	0.50	1.5708	0.00	1.00	0.00	0.000	0.0	10.00 ,0.00	1.0e-10	1.0
3	False	1.00	1.1781	0.00	1.00	0.00	0.000	0.0	10.00 ,0.00	1.0e-10	1.0
4	False	1.00	1.5708	0.15	1.00	0.00	0.000	0.0	10.00 ,0.00	1.0e-10	1.0
5	False	1.00	1.5708	0.00	2.00	0.00	0.000	0.0	10.00 ,0.00	1.0e-10	1.0
6	False	1.00	1.5708	0.00	1.00	0.50	0.000	0.0	10.00 ,0.00	1.0e-10	1.0
7	False	1.00	1.5708	0.00	1.00	0.00	0.125	0.0	10.00 ,-10.00	3.0e-02	1.0
8	False	1.00	1.5708	0.00	1.00	0.00	0.000	0.5	10.00 ,0.00	1.0e-10	1.0
9	False	1.00	1.5708	0.00	1.00	0.00	0.000	0.0	0.75 ,0.25	1.0e-10	1.0
10	False	1.00	1.5708	0.00	1.00	0.00	0.000	0.0	10.00 ,0.00	1.0e-10	2.0
11	False	0.50	1.1781	0.15	2.00	0.50	0.000	0.5	10.00 ,0.00	1.0e-10	2.0
12	False	0.50	1.1781	0.15	2.00	0.50	0.125	0.5	10.00 ,-10.00	3.0e-02	2.0
13	True	1.00	1.5708	0.00	1.00	0.00	0.000	0.0	10.00 ,0.00	1.0e-10	1.0

The tolerances above were chosen basically to be machine tolerance which is consistently passable between machines and operating systems. Those tests involving noise have looser tolerances because they are comparing the standard deviation of generated noise with the requested standard deviation. longer runs would make this tolerance tighter, but take large amounts of time for users to run the tests.

6 Test Results

The results of each test are shown in the table below. If a test did not pass, an error message is included.

Table 3: Test results.

Test	Pass/Fail	Notes
1	PASSED	
2	PASSED	
3	PASSED	
4	PASSED	
5	PASSED	
6	PASSED	
7	PASSED	
8	PASSED	
9	PASSED	
10	PASSED	
11	PASSED	
12	PASSED	
13	PASSED	

In addition to the tabulated results, test data has been plotted for visual inspection. In Fig. 2, all single coarse sun sensor simulations have been plotted on top of one another. This makes for convenient comparison between the cases. For instance, the scaleFactor case can be seen to peak at 2 rather than 1 whereas the eclipse case peaks at 0.5. Furthermore, the fieldOfView test drops to zero at a value less than $\frac{\pi}{2}$ but it follows the plain case otherwise. The kellyFactor case similarly follows the plain curve, except at the edges. The albedo curve cannot be seen because it lies directly beneath the plain curve. The bias curve is equivalent to the plain curve, but shifted up. Finally, the two curves with noise clearly follow the ordinary curve pattern.

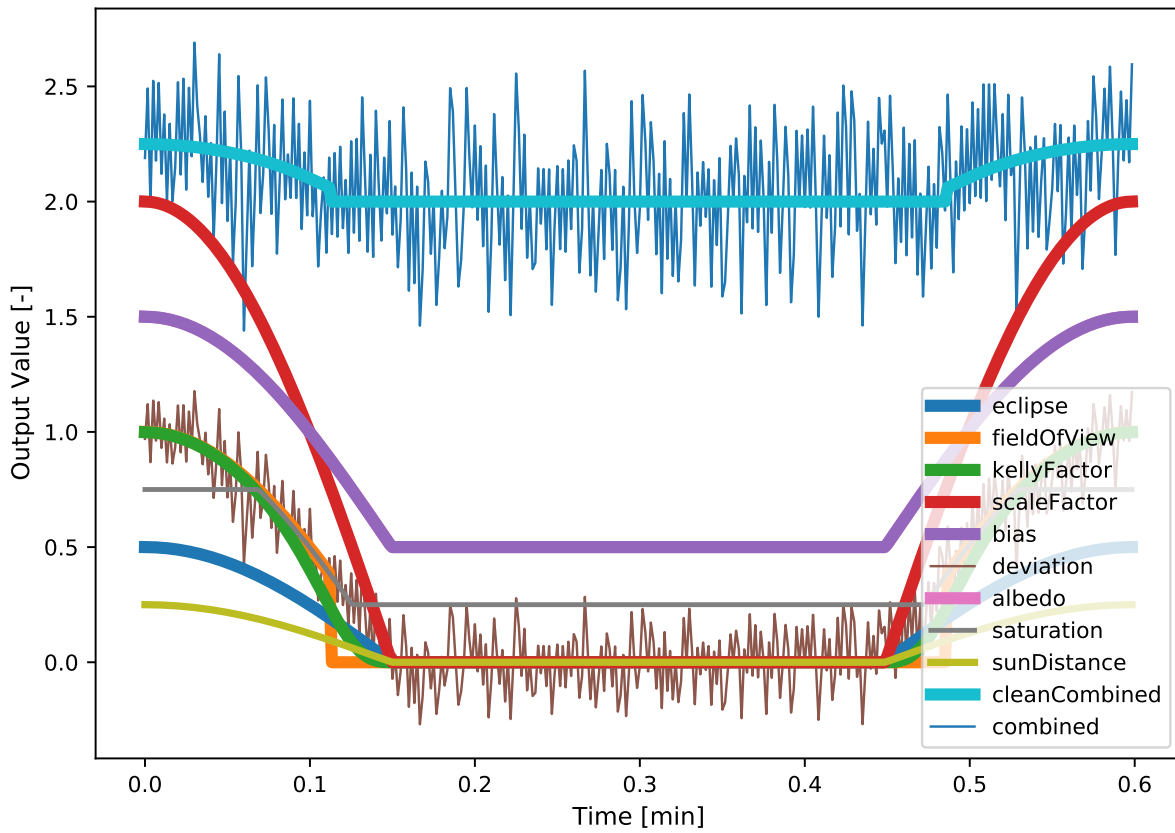


Fig. 2: Plot of all cases of individual coarse sun sensor in comparison to each other. Note that the incidence angle starts at direct and linearly rotates in time until it returns to a direct view.

The constellation test results are shown in Fig. 3. The results are identical to each other and the test has been successful.

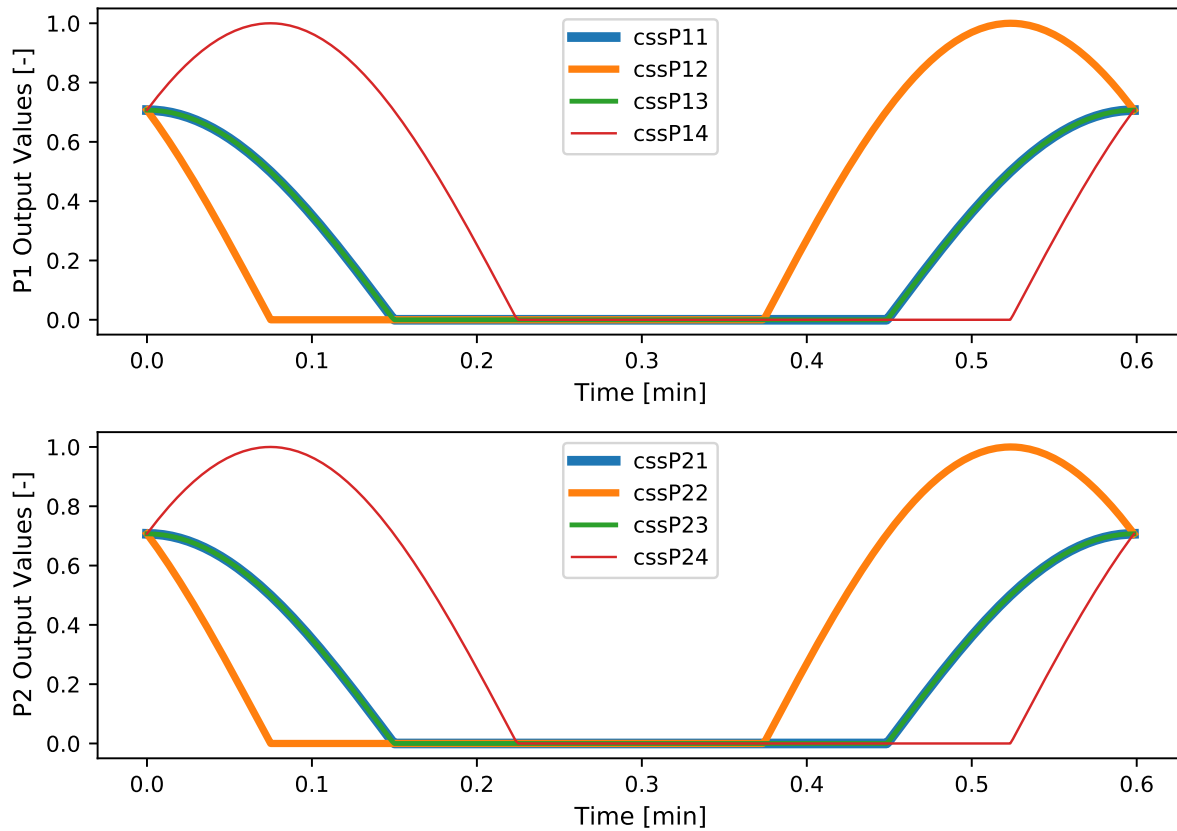


Fig. 3: Plot of first and second constellation outputs for comparison. Note that the constellation starts pointing directly at the sun and linearly rotates in time until it returns to a direct view.

7 User Guide

7.1 Setting the CSS Unit Direction Vector

7.1.1 Direct Method

The unit normal vector of each CSS sensor is set through the \mathcal{B} frame vector representation

$$\mathbf{nHat_B} \equiv {}^{\mathcal{B}}\hat{\mathbf{n}} \quad (12)$$

It is possible to set these vectors directly. However, there are some convenience functions that make this process easier.

7.1.2 Via a Common Sensor Platform

Multiple CSS devices are often arranged together on a single CSS platform. The orientation of the body-fixed platform frame $\mathcal{P} : \{\hat{\mathbf{p}}_1, \hat{\mathbf{p}}_2, \hat{\mathbf{p}}_3\}$ relative to the body frame $\mathcal{B} : \{\hat{\mathbf{b}}_1, \hat{\mathbf{b}}_2, \hat{\mathbf{b}}_3\}$ is given through $[PB]$. In the CSS module, the DCM is specified through the variable `dcm_PB`.

Assume the DCM `dcm_PB` is set directly via Python. Two angles then define the orientation of the sensor normal axis $\hat{\mathbf{n}}$. The elevation angle is ϕ and the azimuth angle is θ . These are an Euler angle

sequence with the order 3-(-2). The elevation angle is a positive 3-axis rotation, while the azimuth is a minus 2-axis rotation. The helper function

$$\text{setUnitDirectionVectorWithPerturbation}(\theta_p, \phi_p)$$

where θ_p and ϕ_p are CSS heading perturbation can be specified. The Euler angles implemented are then

$$\phi_{\text{actual}} = \phi_{\text{true}} + \phi_p \quad (13)$$

$$\theta_{\text{actual}} = \theta_{\text{true}} + \theta_p \quad (14)$$

To setup un-perturbed CSS sensor axes simple set these perturbation angles to zero.

Instead of setting the DCM `dcM_PB` variable directly, this can also be set via the helper function

$$\text{setBodyToPlatformDCM}(\psi, \theta, \phi)$$

where (ψ, θ, ϕ) are classical 3 – 2 – 1 Euler angles that map from the body frame \mathcal{B} to the platform frame \mathcal{P} .

7.2 CSS Field-of-View

The CSS sensor field of view is set by specifying the class variable

$$\text{fov}$$

This angle is the angle from the bore-sight axis to the edge of the field of view, and is expressed in terms of radians. It defaults to a value of 60 degrees.

7.3 CSS Output Scale

The general CSS signal computation is performed in a normalized manner yielding an unperturbed output between 0 and 1. The CSS module variable

$$\text{scaleFactor}$$

is the scale factor α which scales the output to the desired range of values, as well as the desired units. For example, if the maximum sun signal (\hat{n} points directly at sun) should yield 1 mA, then the scale factor is set to this value.

If not set by the user, this parameter has a default value of 1.0.

7.4 Specifying CSS Sensor Noise

Three types of CSS signal corruptions can be simulated. If not specified, all these corruptions are zeroed.

The Kelly corruption parameter κ is set by specifying the variable

$$\text{KellyFactor}$$

Second, to add a gaussian noise component to the normalized output the variable, the variable

$$\text{SenNoiseStd}$$

is set to a non-zero value. This is the standard deviation of normalized gaussian noise. Note that this noise magnitude is in terms of normalized units as it is added to the 0-1 nominal signal.

Next, to simulate a signal bias, the variable

$$\text{SenBias}$$

is set to a non-zero value. This constant bias of the normalized gaussian noise.

Finally, to set saturation values, the variables

`maxOutput`

`minOutput`

are used. `minOutput` is 0 by default and `maxOutput` is 1,000,000 by default.

7.5 Connecting Messages

If the `EclipseSimMsg` is connected, then the solar eclipse information is taken into account. The eclipse info provides 0 if the spacecraft is fully in a planet's shadow, 1 if in free space fully exposed to the sun, and a value between (0,1) if in the penumbra region. The cosine sensor value $\hat{\gamma}$ is scaled by this eclipse value. If the message is not connected, then this value defaults to 1, thus simulating a spacecraft that is fully exposed to the sun.

If the optional albedo message is connected, then its information is included in the CSS sensor data evaluation.

7.6 Auxiliary Parameters

The following module variables can be set, but they are not currently used by the CSS module itself. These are used however in the Vizard visualization.

- `r_B` – position vector of the sensor relative to the body frame \mathcal{B} . If not set, this defaults to a zero vector.
- `CSSGroupID` – positive integer ID number if the CSS unit belongs to a group of CSS units. If not set, this defaults to group 0.

7.7 Setting Up CSS Modules

7.7.1 Individual CSS Units

It is possible to add Individual CSS units to the Basilisk simulation. This is done by invoking instances of the `CoarseSunSensor()` class from python, configuring the required states, and then adding each to the BSK evaluation stack. Each `CoarseSunSensor` class has its own `UpdateState()` method that gets evaluated each update period.

This setup is convenient if only 1-2 CSS units have to be modeled, but can be cumbersome if a larger cluster of CSS units must be administered. When setup this way, each CSS unit will output an individual CSS output message.

7.7.2 Array or Constellation of CSS Units

An alternate method to setup a series of CSS units is to use the `CSSConstellation()` class. This class is able to store a series of CSS `CoarseSunSensor` objects, and engage the update routine on all of them at once. This way only the `CSSConstellation` module needs to be added to the BSK update stack. In this method the `CSSConstellation` module outputs a single CSS sensor message which contains an array of doubles with the CSS sensor signal. Here the individual CSS units `CSS1`, `CSS2`, etc. are setup and configured first. Next, they are added to the `CSSConstellation` through the python command

```
cssConstellation.sensorList = coarse_sun_sensor.CSSVector([CSS1, CSS2, ..., CSS8])
```